Wildcat Extreme Sports Go Cart

OWNER'S MANUAL — Please read before using this equipment.

Steer your Wildcat anywhere you want to go!

Your RadioShack Wildcat Extreme Sports Go Cart is the newest, coolest car on the block! Built to 1/10 scale, your Wildcat can reach speeds up to 350 feet per minute. The Wildcat comes in two frequencies (27 MHz and 49 MHz) so you can race with a friend. Check your Wildcat's box to see which frequency the go-cart uses. The steering wheel turns left and right when the car turns, and the exhaust pipe lights up when the car is moving. The Wildcat is perfect for beginning racers, ages six and up.

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	Wildcat Extreme Sports Go Cart
Model:	60-4280
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your Wildcat.

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

RadioShack®

www.radioshack.com℠

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

INSTALLING BATTERIES

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- When the Wildcat stops operating properly, replace the batteries.
- If you do not plan to use the Wildcat for a week or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

In the Transmitter

The transmitter requires one 9-volt battery (not supplied). For best performance and longest life, we recommend RadioShack alkaline batteries.

1. Slide **ON/OFF** on the transmitter to **OFF**.
2. Slide the battery compartment in the direction of the arrow to remove it.
3. Place the battery in the compartment as indicated by the polarity symbols (+ and –) marked inside.
4. Slide the cover back in place and snap it shut.

When the transmitter's range decreases, replace its battery.

In the Car

Your Wildcat requires four AA alkaline batteries for power (not supplied). For best performance and longest life, we recommend RadioShack alkaline batteries.

1. Slide **ON/OFF** on the bottom of the Wildcat to **OFF**.
2. Slide the battery compartment cover's latches in the direction of the arrow to **OPEN**, then lift off the cover.
3. Install the batteries in the compartment as indicated by the polarity symbols (+ and –) marked inside the compartment.
4. Replace the battery compartment cover and turn the latches back to secure the battery compartment.

If the Wildcat moves slowly or not at all, replace the Wildcat's batteries.

DRIVING THE WILDCAT

Warnings:

- Watch where the Wildcat is going to avoid crashes.
- Never play with the Wildcat in the street.

1. Slide **ON/OFF** on the bottom of the Wildcat to **ON**.
2. Slide **ON/OFF** on the transmitter to **ON**.

3. Use the transmitter's control levers to move and steer the Wildcat.

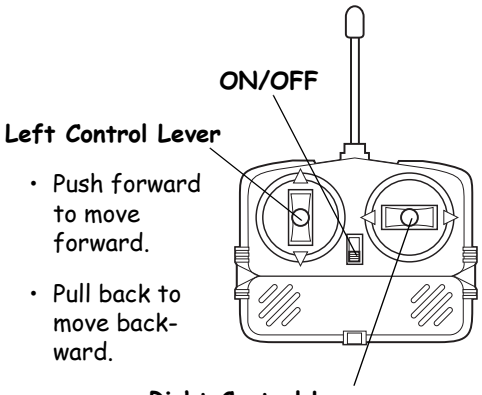

- Push forward to move forward.
- Pull back to move backward.

Right Control Lever

- Push left to turn left.
- Push right to turn right.

4. When you finish driving the Wildcat, slide **ON/OFF** on both the car and the transmitter to **OFF**.

WHEEL ALIGNMENT

If the Wildcat does not drive in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the Wildcat. Rotate the control to **L** if the car is pulling to the right, or to **R** if the car is pulling to the left.

HELPFUL HINTS

- Running your car continuously for long periods generates high heat levels. Heat causes the most wear and tear on the motor. To keep heat levels down, when your car's batteries run down, let the car cool at least 10 minutes before installing new batteries.
- If the Wildcat slowly and you have installed fresh batteries, check the wheel mechanism for debris.
- If someone uses a CB nearby, it might interfere with control of the Wildcat. If this happens, move the Wildcat and its transmitter away from the CB.
- You cannot operate your Wildcat near devices with transmitters that use the same frequency (27 or 49 MHz). Check the Wildcat's box to see which frequency your car uses.

CARE

Keep the Wildcat dry; if it gets wet, wipe it dry immediately. Use and store the Wildcat only in normal temperature environments. Handle the Wildcat carefully; do not drop it. Keep the Wildcat away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Wildcat's internal components can cause a malfunction and might invalidate its warranty. If your Wildcat is not performing as it should, take it to your local RadioShack store for assistance.

USER-REPLACEABLE PARTS

You can order replacement parts for your car at your local RadioShack store.

Description	RSU Number
Transmitter Battery Door	12175717
Receiver Battery Door	12340469
Transmitter (27MHz)	12340477
Transmitter (49MHz)	12340451
Front Bumper Assembly	12340394
Hubcap, Front Wheel	12340444
Hubcap, Rear Wheel	12340402
Tire, Front Wheel	12340428
Tire, Rear Wheel	12340410
Owner's Manual	12340436

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack Corporation
Fort Worth, Texas 76102

60-4280
06A01
Printed in China